



**SPARCO HARNESS BAR
1994-2001 ACURA INTEGRA
PART # 30013**

DISCLAIMER

Motorsports are dangerous. No warranty or representation is made as to product's ability to protect the user from any injury or death; the user assumes that risk. Sparco Motor Sports' products are legal in all 50 states for use on racing vehicles which may never be used on a highway. Not applicable or intended for street or highway use.

INSTALLATION


1. Assemble the harness support rods as shown below using the provided heim joints and nuts. Leave at least ¼" of thread showing on each heim joint to allow for adjustment during installation. Do not fully tighten the nuts at this time. **NOTE: One end of each of the support rods has reversed thread.**



2. On both sides of the vehicle's interior, remove the plastic factory shoulder belt bolt cover and remove the upper bolt as shown here.




3. Remove the fiber retaining washer, the small spacer, and lock washer. Leave the large flat washer in place. Use the supplied small spacer as shown and install the harness bar into the vehicle. Do not tighten the bolts at this time.

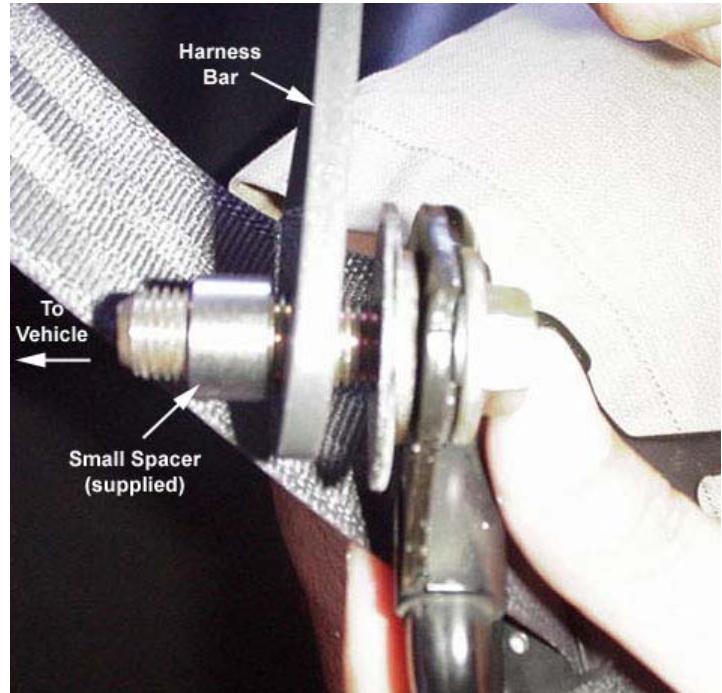


4. Remove the lower seat belt mount cover and remove the bolt.



5. Remove all of the factory hardware from the factory bolt. Slide the factory small steel washer, factory wavy washer, and the plastic washer onto the supplied bolt. Assemble the rest of the hardware as shown. Do not fully tighten the bolt at this time. **NOTE: Spin the heim joint all the way into the support rod and tighten the nut before sliding it onto the bolt.**

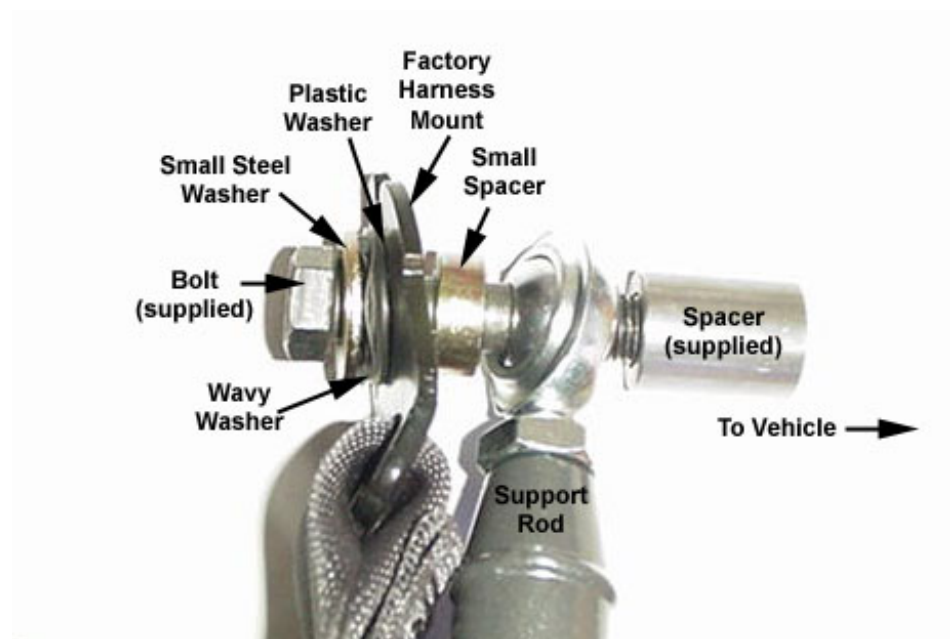

6. Connect the support rods to the harness bar using the supplied bolts, washers, and nuts. Do not fully tighten at this time.

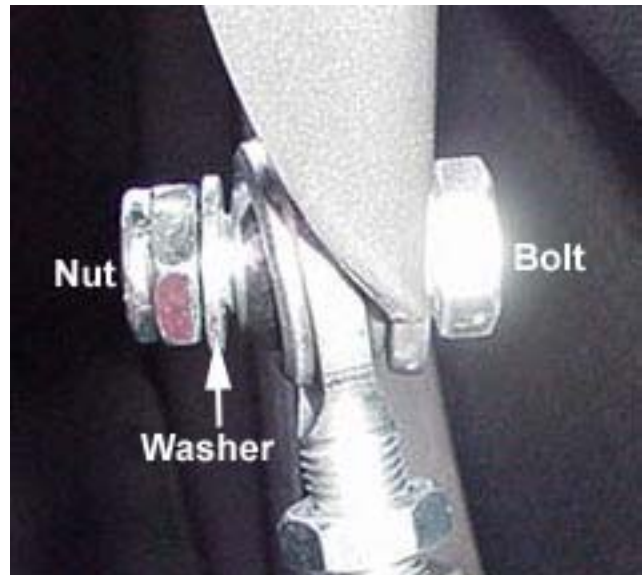

7. Check for proper installation and adjust as necessary. Tighten all bolts and nuts. The finished installation should look like this:

